

HEATER REPAIR INSTRUCTION

1. Disconnection



Remove the plug



Turn off the tap and disconnect the hose from the valve




Disconnect the drain hose

2. Necessary Tools




- A. Plier
- B. Flat head screwdriver
- C. Ratchet Wrench with M8 head


3. Disassembly Instructions

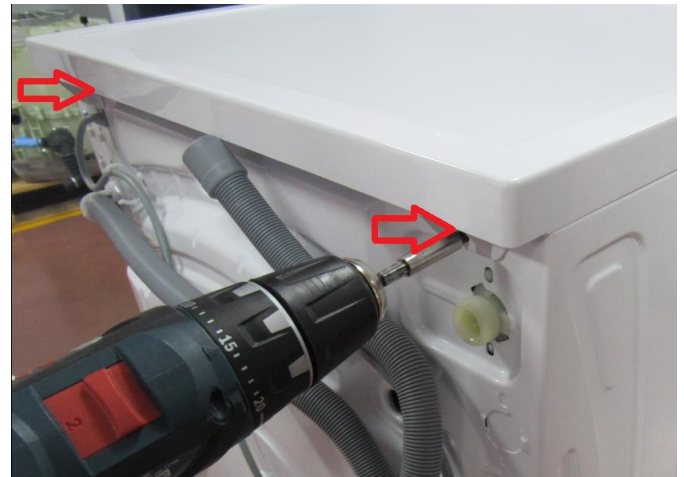

Remove two screws that fix the top-plate at the back.

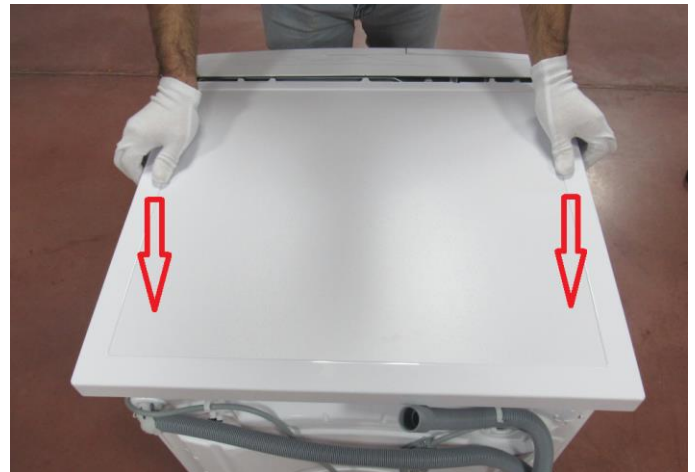

Push the top-plate back and pull it up.

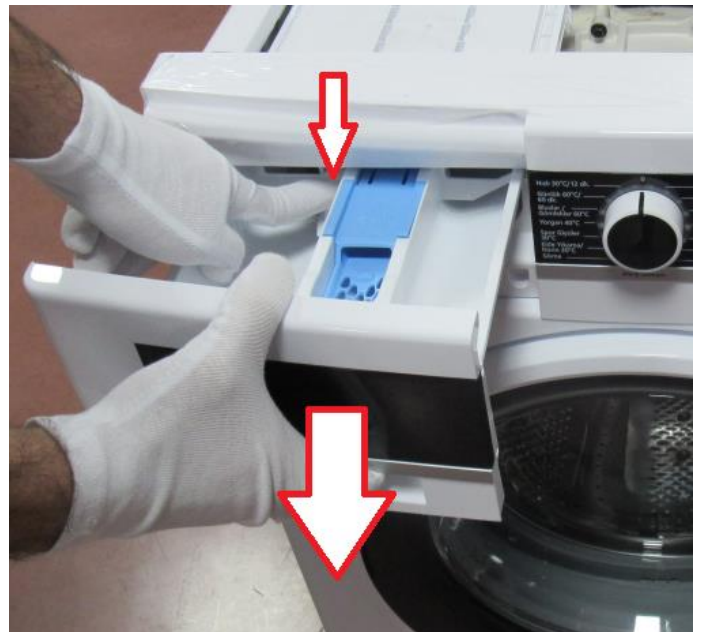


While pressing siphon cover keep pulling drawer to remove it.

HEATER REPAIR INSTRUCTION



Remove the screw which fixes the control panel to the front panel.

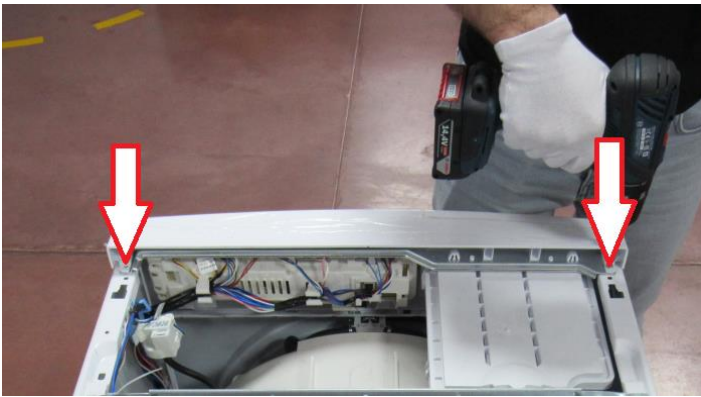

Remove two screws fixing control panel.



Remove the screw on support bracket and two screws fixing front panel to body



Remove the screw fixing twinjet elbow.



Remove the screws fixing the door lock.




Remove the screw and plastic part located under the pump cover

HEATER REPAIR INSTRUCTION




Remove the screw fixing the front panel at the bottom.

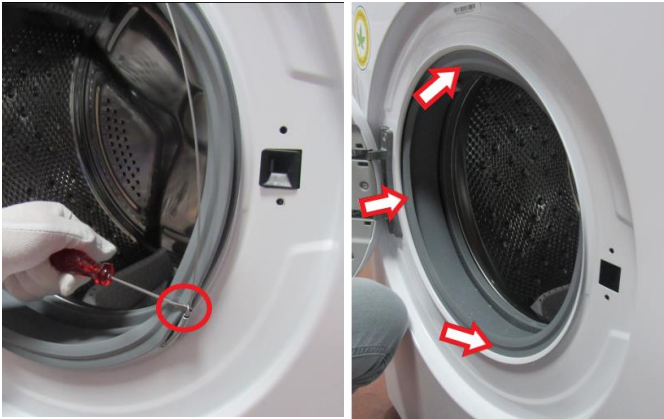


Remove the wire by using small screwdriver and push the seal to the inside




Pull up and remove the front panel.

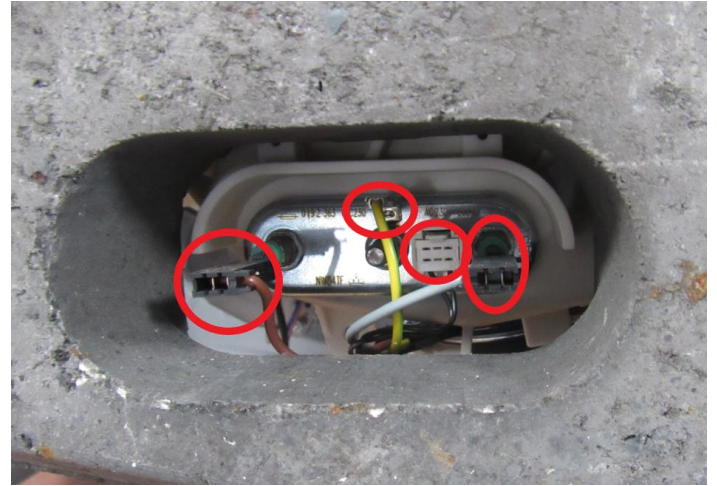



Remove the heater sockets

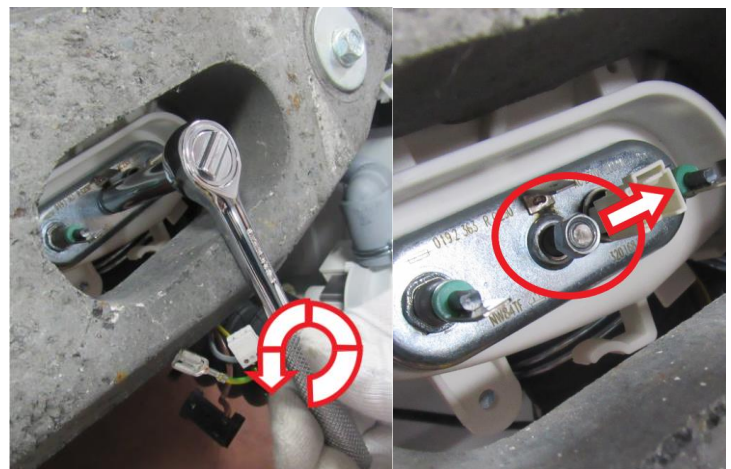

HEATER REPAIR INSTRUCTION

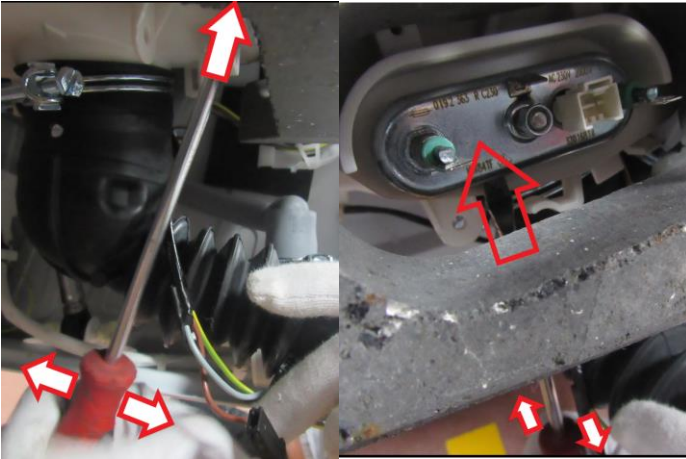


4. Assembly Instructions

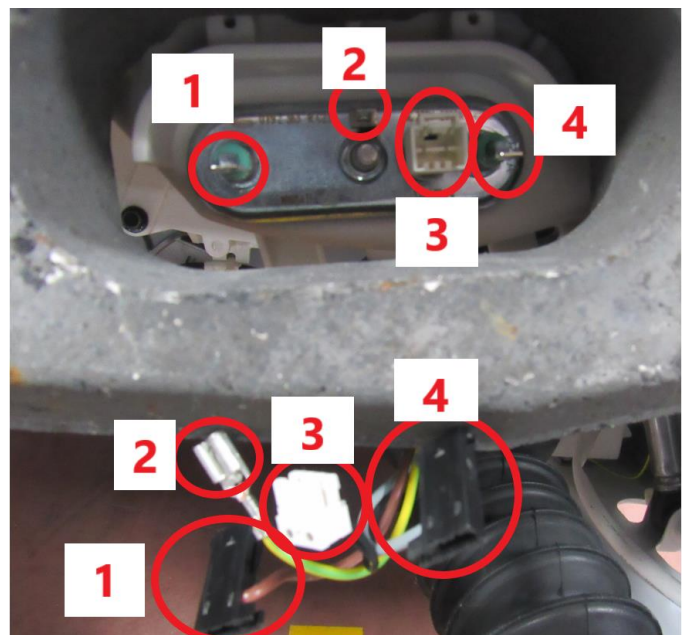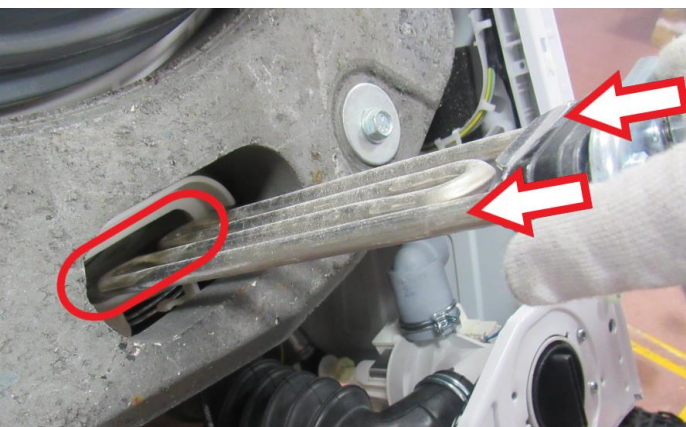

HEATER REPAIR INSTRUCTION



Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver

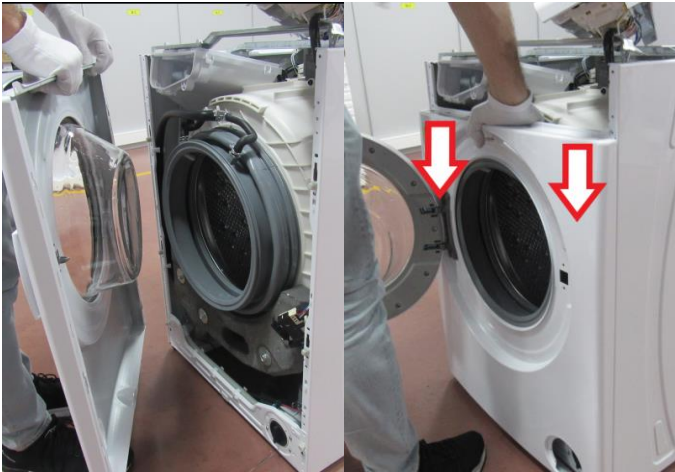


Put the front panel to the cabinet and push down to set it



Tighten the screw fixing the front panel at the bottom



Tighten the door lock screw

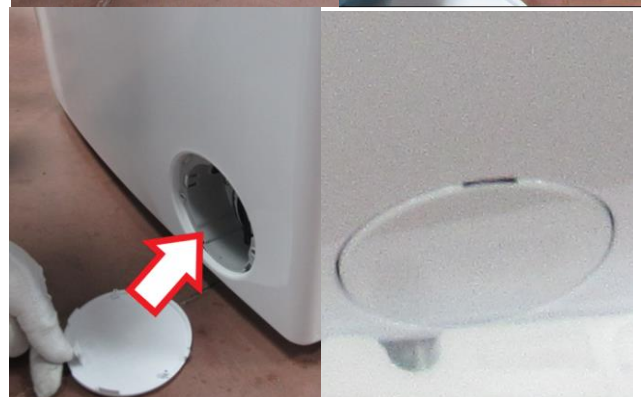

HEATER REPAIR INSTRUCTION


Tighten the screw and plastic part located under the pump cover



Assemble the twinjet elbow to the front panel




Tighten the screw on support bracket and two screws fixing front panel to body

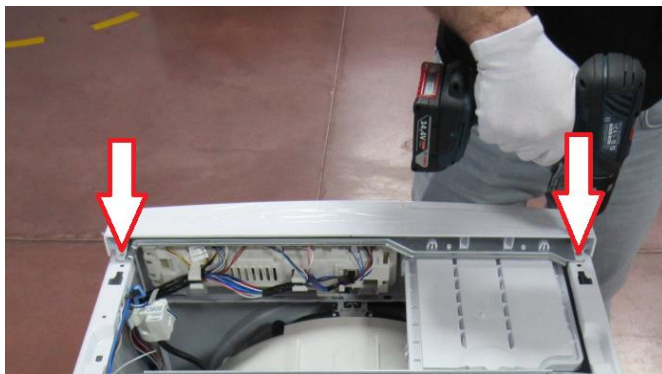


Tighten two screws fixing control panel.




Tighten the screw which fixes the control panel to the front panel.

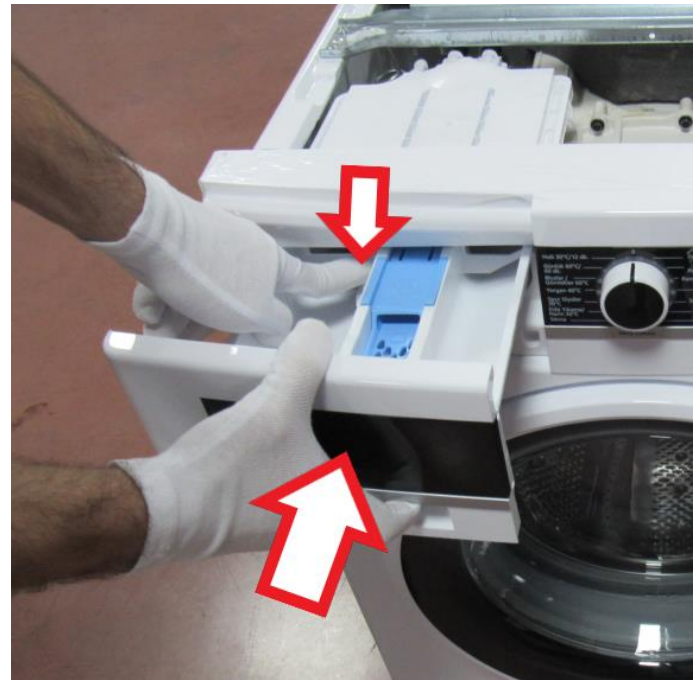

While pressing siphon cover keep pushing drawer to fit it

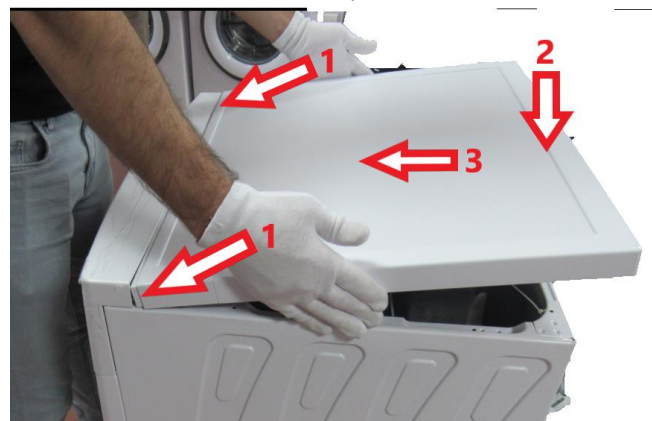

Fit the upper tray according to movement above

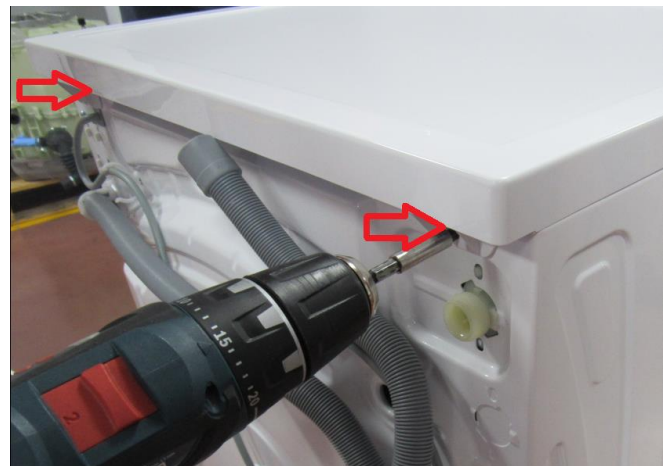

Tighten two screws that fix the top-plate at the back.