

1. Prüfprogramm wählen

Programmwahlschalter-Funktion beachten!		
Prüfprogramm aktivieren:	● Programmwahlschalter auf Stellung 'Aus' ● Die beiden dem Programmwähler am nächsten liegenden Funktionstasten drücken ● dabei das Programm Pflegeleicht 30° wählen	Anzeige: bei Fehleranzeige LEDs blinken. Fehler wird <u>einmalig</u> angezeigt ● LEDs 'aktiv' und 'fertig' leuchten
Einzelkomponente auswählen:	● Programmwahlschalter auf ein Prüfprogramm stellen (gegen Uhrzeigersinn, nicht über 'Aus')	● LEDs 'aktiv' und 'fertig' leuchten
Prüfprogramm starten:	● Taste Start drücken	● LEDs 'aktiv' und 'fertig' leuchten
Prüfprogramm abbrechen:	● Taste Start drücken oder ● Programmwähler verstellen	● LEDs 'aktiv' und 'fertig' leuchten
Fehler im Prüfprogramm:		● siehe Kapitel 4 Fehleranzeige

1.1 Prüfprogramm Einzelkomponententest

Ansteuerung durch Start-Taste:
Erste Tastenbetätigung Verbraucher EIN
Zweite Tastenbetätigung Verbraucher AUS

Funktion:		Prüfprogramm
Koch / Buntlw. 60°	→	Motor (siehe 1.2)
Koch / Buntlw. 60° eco	→	Pumpe
Koch / Buntlw. 90°	→	Heizung (Wassereinlaß Niv. 1, Temp. max.)
Koch / Buntlw. 60° Vorwäsche	→	Magnetventil Warmwasser
Extraspülen	→	Magnetventile Vorwäsche + Hauptwäsche
Extraschleudern	→	Magnetventil Hauptwäsche
Abpumpen	→	Magnetventil Vorwäsche

1.2 Prüfprogramm Motor

Prüfung:	Ablauf:	Zeit:
Reversieren	● Trommel Linkslauf mit 50 min⁻¹ ● Pause ● Trommel Rechtslauf mit 50 min⁻¹	3s 3s 3s
Schleudern / Pumpen	● konstanter Anstieg auf n_{max} ● ohne Unwuchterkennung ● mit Katastrophenabfrage ● Drehzahlabwahl möglich ● Bei Erreichen n_{max} erlischt LED 'aktiv' Prüfprogr. abbrechen: - Programmwähler verstellen - Drehzahl abwählen	bis Programm abgebrochen wird

1. Selecting the test programme

Observe correct method for setting programme selector!		
Activate test programme:	● Set programme selector switch to OFF position ● Press the two function buttons situated next to the programme selector ● and select the Easy Care programme 30°	Displays: LEDs are flashing in case of fault. Fault indication is displayed <u>only one time</u> . ● 'active' and 'finished' LEDs illuminate
Select single component:	● Set the programme selector switch to test programme (anti-clockwise, not via 'OFF ')	● 'active' and 'finished' LEDs illuminate
Start test programme:	● Press the START button	● 'active' and 'finished' LEDs illuminate
Abort test programme:	● Press the START button or ● adjust Programme selector	● 'active' and 'finished' LEDs illuminate
Fault in test programme:		● see section 4: Fault indication

1.1 Test programme: Single component test

Loads controlled by pressing START button:
first time button pressed load ON
second time button pressed load OFF

Function:		Test Programme
Cotton/Coloureds 60°	→	Motor (see 1.2)
Cotton/Coloureds 60° eco	→	Pump
Cotton/Coloureds 90°	→	Heater (Water intake level 1, temp. max)
Cotton/Coloureds 60° Prewash	→	Inlet Valve Warm Water
Extras Rinsing	→	Inlet Valve Prewash + Main Wash
Extra Spinning	→	Inlet Valve Main Wash
Draining	→	Inlet Valve Prewash

1.2 Test programme: Motor

Test:	Sequence:	Duration:
Reversing	● anti-clockwise drum rotation at 50 r.p.m. ● pause ● clockwise drum rotation at 50 r.p.m.	3s 3s 3s
Spinning / Pumping	● climbs continuously to n_{max} ● without detection of unbalance ● catastrophe inquiry only ● Speed deselection possible ● When n_{max} is reached, the LED 'aktiv' goes out Terminate test programme: - Adjust programme selector - Deselect speed	Until programme is terminated